



## HANDLE SAFETY

### IMPORTANT NOTICE

Only use the side handles to lift the pressure cooker. This applies to the pressure cooker when it is empty or contains items. NEVER use the top handle to lift the complete unit. The top handle is used to remove the cover only.